

VX-11

USER'S MANUAL



Audio/Video Subwoofer



IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



Caution

To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

The lightning flash with arrowhead symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the subwoofer.

1. **Read Instructions** — All safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** — The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** — All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions** — All operating and use instructions should be followed.
5. **Water and Moisture** — The product should not be used near water — for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool or the like.
6. **Carts and Stands** — The product should be used only with a cart or stand recommended by the manufacturer.
7. **Wall or Ceiling Mounting** — The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** — The product should be situated so that its location or position does not interfere with its proper ventilation. For example, the product should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products that produce heat.
10. **Power Sources** — The product should be connected to a power supply only of the type described in the operating instructions or as marked on the product.
11. **Grounding or Polarization** — This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. **Power-Cord Protection** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point at which they exit from the product.
13. **Cleaning** — The product should be cleaned only as recommended by the manufacturer.
14. **Nonuse Periods** — The power cord of the product should be unplugged from the outlet when left unused for a long period of time.
15. **Object and Liquid Entry** — Care should be taken so that objects do not fall and liquids are not spilled onto the enclosure.
16. **Damage Requiring Service** — The product should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen or liquid has been spilled into the product.
 - c. The product has been exposed to rain.
 - d. The product does not appear to operate normally or exhibits a marked change in performance.
 - e. The product has been dropped or damaged.
17. **Servicing** — The user should not attempt to service the product beyond what is described in the operating instructions. All other servicing should be referred to qualified service personnel.
18. **Lightning** — For added protection for the product during a lightning storm or when it is left unattended and unused for long periods of time, unplug it from the wall outlet.
19. **Overloading** — Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
20. **Attachments** — Only use attachments and accessories specified by the manufacturer.
21. **Voltage** — Insure that the subwoofer is only connected to the rated source voltage. Do not connect the 120-volt version to 230-volts or vice-versa. This will result in damage to the subwoofer and possible injury to the user.

CAUTION: To prevent electrical shock, match wide blade of plug to wide slot, fully inserted.

TABLE OF CONTENTS

Congratulations	1
Installation	2
Crossovers	5
Interconnect Cables	6
Care of Your Subwoofer	6
Protection Circuitry	9
Troubleshooting and Service	9
Specifications	10
Velodyne Products	11

CONGRATULATIONS

Congratulations on your purchase of a Velodyne subwoofer system. This system represents the state of the art in home audio reproduction and will provide you with years of listening pleasure when properly cared for. Read and follow this instruction manual to insure safe and proper system connection and operation.

Caution!

Please observe the following instructions to insure safe and proper system operation.

Note: Do not leave unit in direct sunlight or use in high humidity environments!!!

Warning!

To prevent fire or shock hazard, do not expose this equipment to rain or moisture. To avoid electrical shock, do not open speaker enclosure or amp chassis cover. Please observe all warnings on the equipment itself. There are no user serviceable parts inside. Please refer all service questions to your authorized Velodyne dealer.

Prior to Installation:

Please unpack the system carefully. This unit is heavy. Use caution when lifting or moving to avoid injury. Please save the carton and all packaging materials for future use. Packing this unit in any other carton may result in severe damage when shipping. Record the serial number in the space provided on page 12 for future reference.

Product Features

- 10" (7.65" piston diameter) subwoofer with 1.6" high-temp voice coil and 32 ounce motor structure
- High efficiency Class D amplifier
- Adjustable (50 to 200 Hz) low-pass crossover @ 12 dB/octave
- Line-level (RCA) inputs
- Speaker-level inputs and outputs with spring loaded terminals
- Signal sensing auto turn on/off
- Variable volume control
- Selectable phase control (0° or 180°)
- Green power on/ Red power standby mode indicator LED

Prepare for Installation

Your new Velodyne subwoofer provides for a number of installation options. Read all the installation information below in order to determine which installation option is best for your system. **Remember to perform all installation procedures with system power turned off to prevent possible damage.**

Placement

Subwoofers operate at extremely low frequencies that are primarily omni-directional. Keep in mind that frequency response and output level can be **drastically** influenced by placement, depending on the acoustic properties of the listening room. Typically, the optimum location for a subwoofer is tucked away in a corner of your listening room where the greatest output levels and optimum low frequency extension can be found. The worst location for a subwoofer is far away from any walls and close to the center of your room. Avoid these locations when possible. Depending on the room size and type of furnishings in the room, perfect placement may not be possible. Finding the best location for your environment will likely require some experimentation. We suggest you experiment with the location during setup to find what sounds best to you when seated in your typical listening position.

Caution! This subwoofer has electronics built into the cabinet. Do not place the cabinet next to sources of heat such as furnace registers, radiators, etc., or near sources of excessive moisture such as evaporative coolers, humidifiers, etc. The power cord should be routed in such a way that it will not be walked on, pinched, or compressed in any way that could result in damaging the insulation or wire.

Regardless of where you install your VX-11 subwoofer, it must remain in an upright position (woofer facing forward). Using, shipping, or otherwise storing the subwoofer in any other position for an extended period of time may result in damage to the unit not covered by warranty.

INSTALLATION

Inputs

Your new subwoofer is equipped with speaker-level and line-level inputs. Use the **LINE LEVEL** jacks when connecting your subwoofer to a pre-amp, signal processor, integrated receiver, line-level crossover, or receiver with pre-amp level outputs. These devices will often have a Low Frequency Effects (LFE) jack which is dedicated for subwoofer use. When using the line level jacks, some receivers may not provide enough signal to have the unit's auto-on feature operate properly. Additionally, this lack of signal may also cause the subwoofer to produce less output than it is capable of.

To alleviate this condition, we recommend the following steps:

- 1) If using line level jacks, BOTH THE LEFT AND RIGHT INPUT SHOULD ALWAYS BE USED – never use just the left or just the right input. If the subwoofer's input comes from the LFE channel of your receiver, use a "Y" splitter to divide the single input into two inputs for the Left and Right subwoofer inputs. This dual male-to-female "Y" splitter can be found at your local electronics store. If using line level connections from a preamp or signal processor, use both Left and Right inputs from your preprocessor or preamp and connect them to the Left and Right inputs on your subwoofer.
- 2) If using a receiver with LFE out, be sure the LFE channel is sending adequate signal to the subwoofer. We recommend setting the subwoofer's level to the 9 o'clock position (the 1/4 volume setting) and then adjust the LFE channel on your receiver or processor to achieve the desired bass output. See your receiver or processor's owner's manual for more information.

Note: A pair of Velodyne subwoofers is a very common setup and doubles your system's bass capability. When using a pair of Velodyne subwoofers in stereo, it is preferable to place each subwoofer by the speaker of the corresponding channel. In this case you may have to use more than one "Y" splitter.

The **SPEAKER LEVEL** jacks connect directly to the speaker outputs of any amplifier, integrated amplifier, or receiver. Your amplifier section will notice no additional loading effects when you use these inputs due to their very high impedance. If using the **SPEAKER LEVEL** inputs, you DO want to connect both channels, since different bass information might be present in each channel going to your main speakers.

IMPORTANT!

Do not use both LINE LEVEL and SPEAKER LEVEL connections simultaneously!

Caution! To avoid damage to your main amplifier, be sure to maintain correct polarity when making all connections - red (positive) to red, and black (negative) to black. Be sure all connections are tight, and that there are no loose strands or frayed wires.

Volume Control

This control allows you to balance the output from the subwoofer to the main speakers/amplifier in your system. This control should be set to achieve similar output levels from both the main speakers and subwoofer when listening to music. A good starting point for the volume control is at the 9:00 position.

Low-pass Crossover - 50 to 200 Hz

A loudspeaker driver is incapable of handling all sound reproduction across the entire audio spectrum by itself. Thus, the crossover splits the frequency spectrum into different pieces, which are then handed over to individual speaker drivers. Each driver receives only the signal in its usable frequency range and the distortion in each driver is reduced.

All line level inputs on the subwoofer sum the left and right channels together, with the resulting signal passing through an adjustable low-pass crossover before being amplified. The crossover control allows you to adjust the upper limit of the subwoofer's frequency response from 50 to 200 Hz. The subwoofer's response will begin rolling off above the frequency you set this control to. You should set the crossover frequency to obtain a smooth and seamless transition from the subwoofer to the main speakers in your system. If your main speakers are smaller units with limited low frequency output, you may wish to choose a higher frequency (such as 100 - 120 Hz) than you would with larger speakers which have greater low frequency output. With larger speakers, you might start with this control set lower, such as 80 Hz.

Phase Adjustment - 0°/180°

This control allows you to "reverse" the phase of the subwoofer's output signal 180° to correct for any possible mismatch and resulting cancellation between the subwoofer and your main speakers/amplifier. To adjust, simply listen to the system with music playing, then ask a friend to adjust the phase switch from one position to the other and listen for a change in mid-bass output. The correct position will have a greater amount of apparent mid-bass output.

For all installations, experiment with the phase switch to determine the setting (0 or 180 degrees) that produces the most mid-bass. If the settings sound similar, we recommend the “0” position.

Auto Turn on Function

The subwoofer will turn itself on automatically when an audio signal is present. If no signal is present for approximately eight minutes, the unit will switch to standby mode (Red LED). While in standby mode, your subwoofer will draw very minimal power.

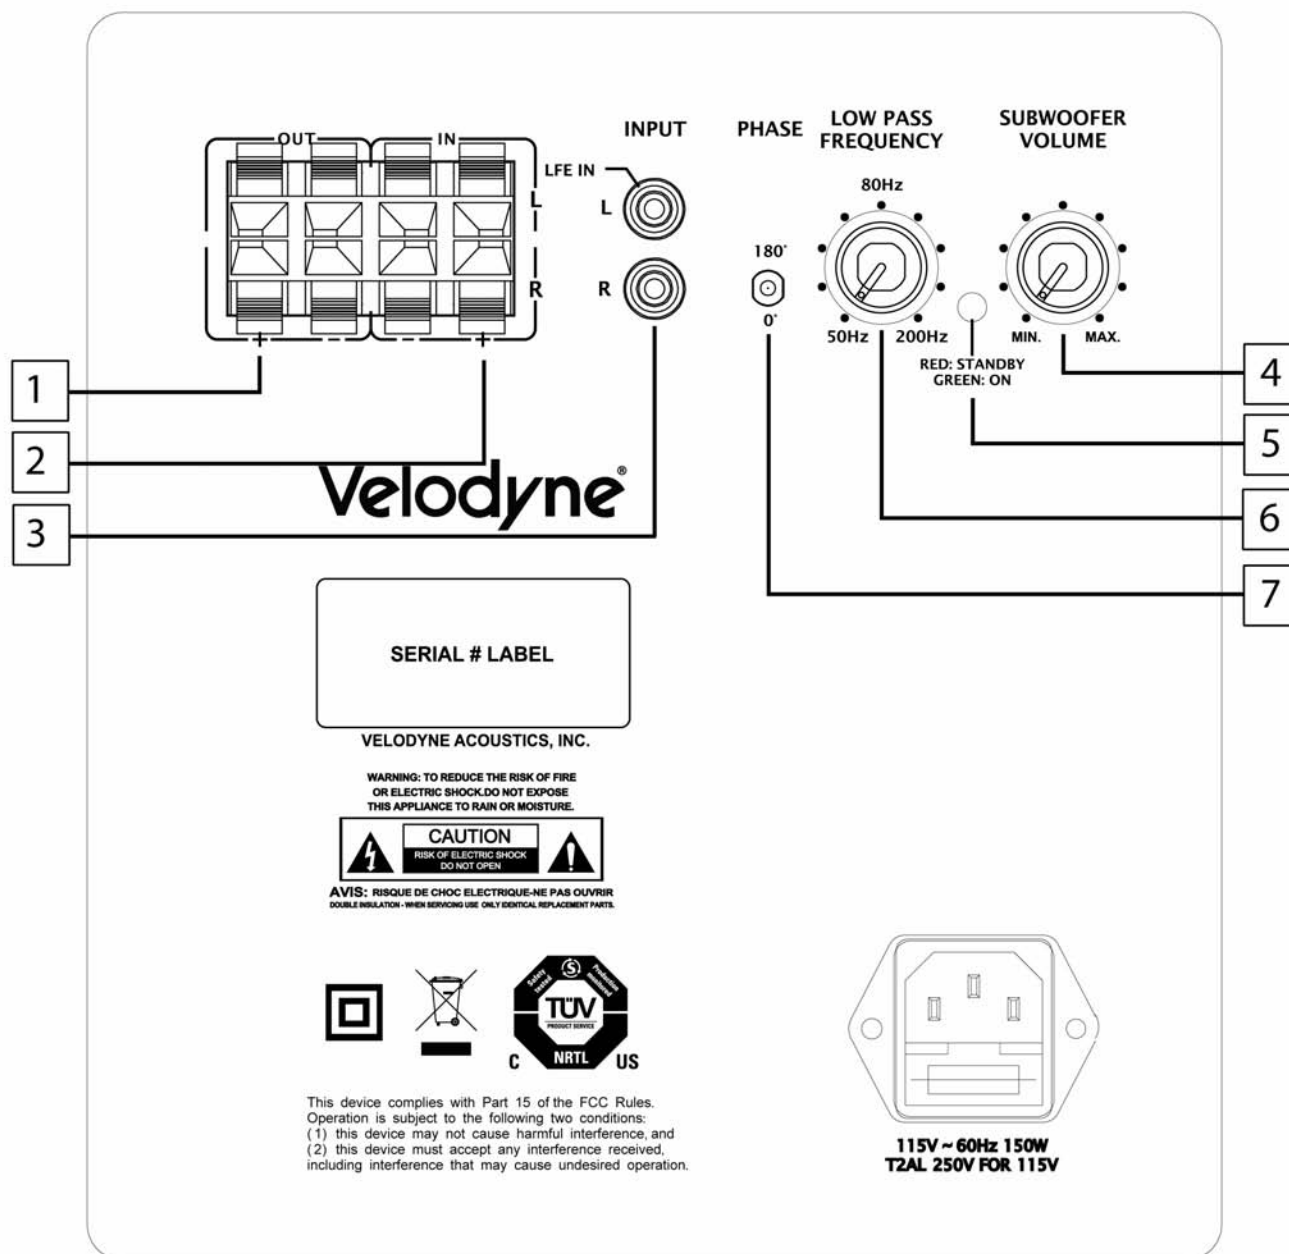 


Figure 1. Rear panel inputs, output and control layout.

- 1 SPEAKER LEVEL OUTPUT terminals**
The speaker-level signal to the front speakers is distributed from these terminals.
- 2 SPEAKER LEVEL INPUT terminals**
Connect these input terminals to the speaker output terminals of your amplifier or receiver.
- 3 LINE INPUT jacks**
Connect these jacks to the LINE OUT jacks of the amplifier.
- 4 VOLUME LEVEL knob**
Use this knob to adjust the output level of the subwoofer.
- 5 Power indicator**
Red: Unit is in standby mode.
Green: Unit is in operation mode.
(automatically turns to STANDBY mode if no signal for eight min.)
- 6 LOW-PASS CROSSOVER**
Use this knob to select the high-frequency range at which you wish to cut-off the signal to the subwoofer.
- 7 PHASE SWITCH**
Use this switch to invert the phase of the subwoofer to create a better blend with your satellite speakers.

CROSSOVERS

Receiver/Processor Subwoofer Outputs

The Velodyne subwoofer is designed to operate using the full range audio signal for input when using the built-in crossover. Many home theater processors/receivers (Dolby Digital™, DTS™, THX™) have a “subwoofer out” jack (sometimes labeled “LFE”) that is internally filtered, settable at the receiver/processor, and designed to be used with a powered subwoofer. In some installations, it may be beneficial to use BOTH the Velodyne crossover and the receiver/processor crossover, resulting in a steeper ultimate crossover slope. In some rare cases, combining both an external crossover and the one internal to the subwoofer may result in low output and increased noise. In these installations you may need to bypass the crossover in either the processor or your VX-11 subwoofer. Or, simply set one crossover to a higher frequency (such as 120 Hz) will restore maximum performance.

(Refer to Figure 2a Line-Level Subwoofer Connection Diagram and Figure 2b Speaker-Level Subwoofer Connection Diagram, pages 7 and 8 for connection diagrams.)

INTERCONNECT CABLES

When installing your new Velodyne subwoofer using the line level connections, you should always use shielded phono cables. There are many high quality cables available today, most any of which will work perfectly well. We do recommend that you keep the length of cable as short as possible to avoid any potential noise problems.

When using speaker level connections, use a high quality quality speaker cable that mates well with the connectors. Be very careful to avoid any loose strands or frayed wires which may result in a short, which may damage your equipment. Cables of extremely large size are typically not required. Extremely large gauge wire may not properly fit in the binding posts, resulting in a poor connection and possible short circuits.

CARE OF YOUR SUBWOOFER

Your Velodyne subwoofer does not require any regular maintenance. Normal dusting or cleaning of the surface for appearance purposes is all that is required. We suggest you avoid any harsh detergents or chemicals when cleaning the cabinet. We recommend using only a damp cloth for cleaning and to avoid abrasives, detergents, or cleaning solutions which may damage the finish on the cabinet.

During normal conditions, your new subwoofer may be left on continuously without any problems. The unit is equipped with a signal-sensing on/off switch that will automatically turn on the unit when a signal is present at the inputs and turn off the unit after several minutes when there is no longer any signal at the inputs. If your subwoofer is not to be played for an extended period of time we recommend you unplug the unit.

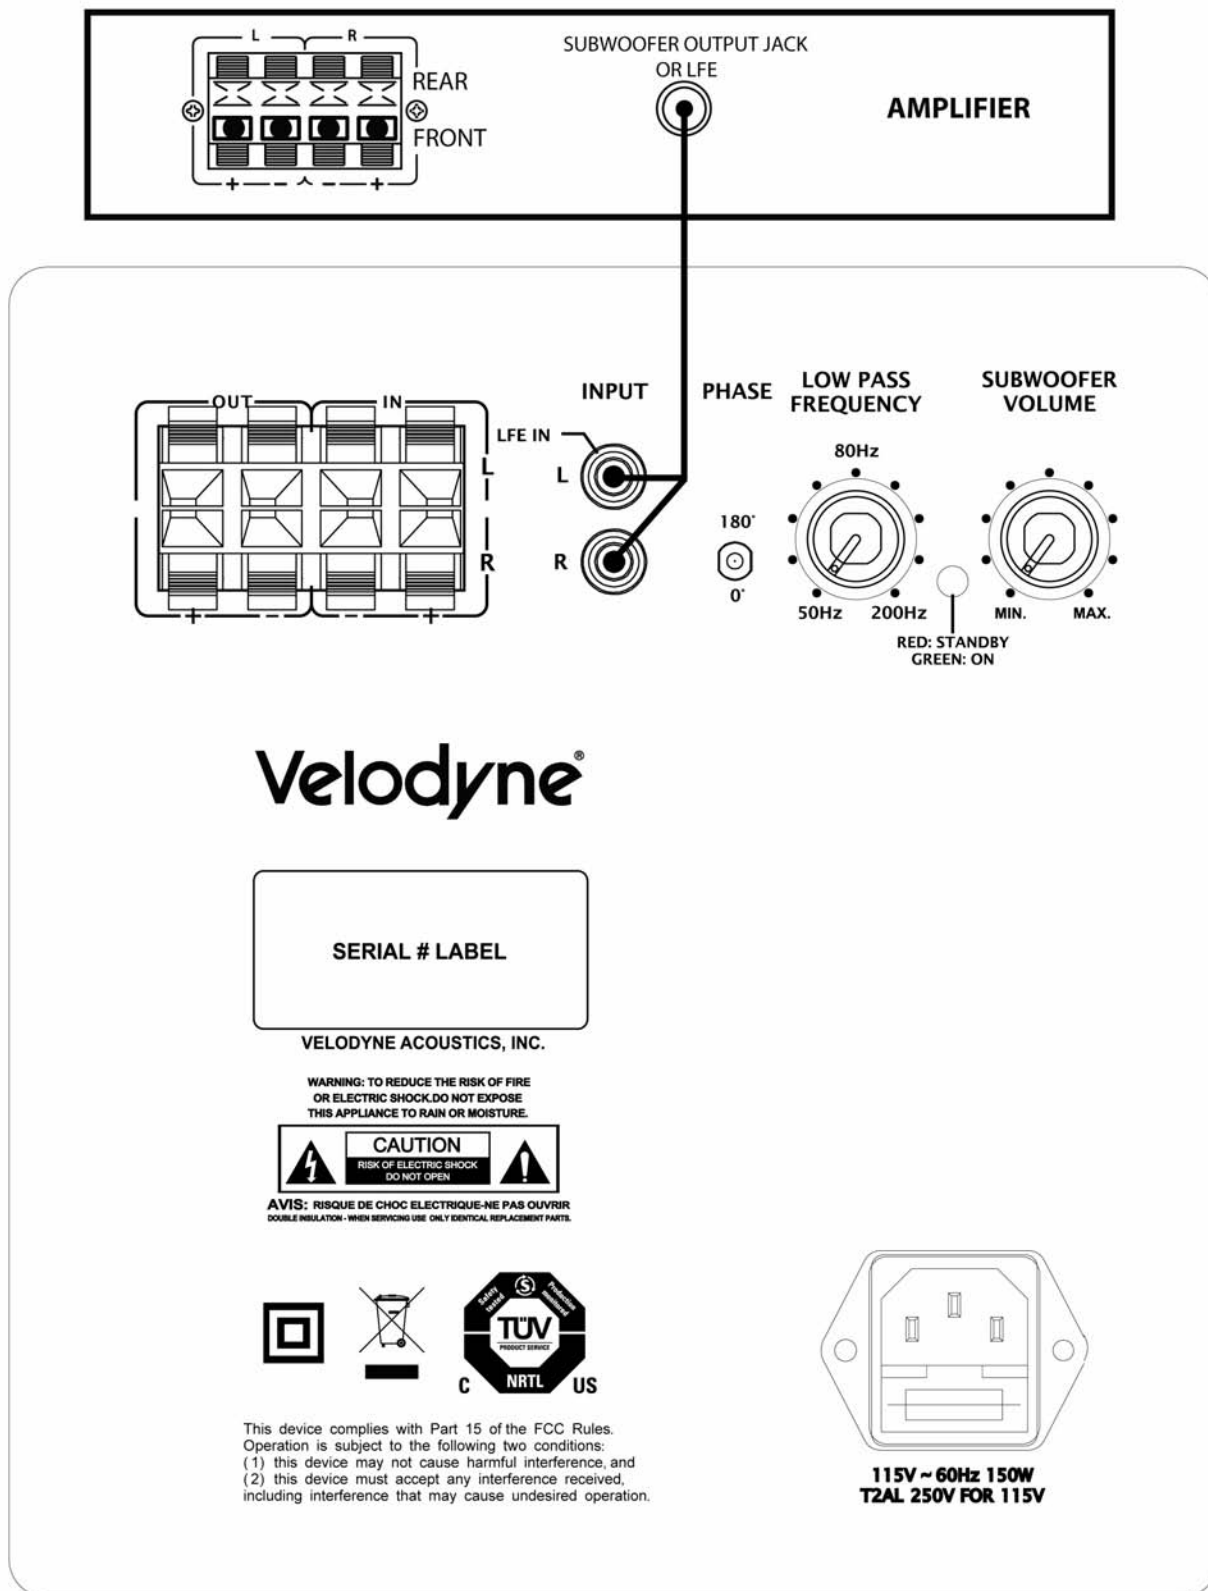 


Figure 2a. Line-level subwoofer connection diagram.

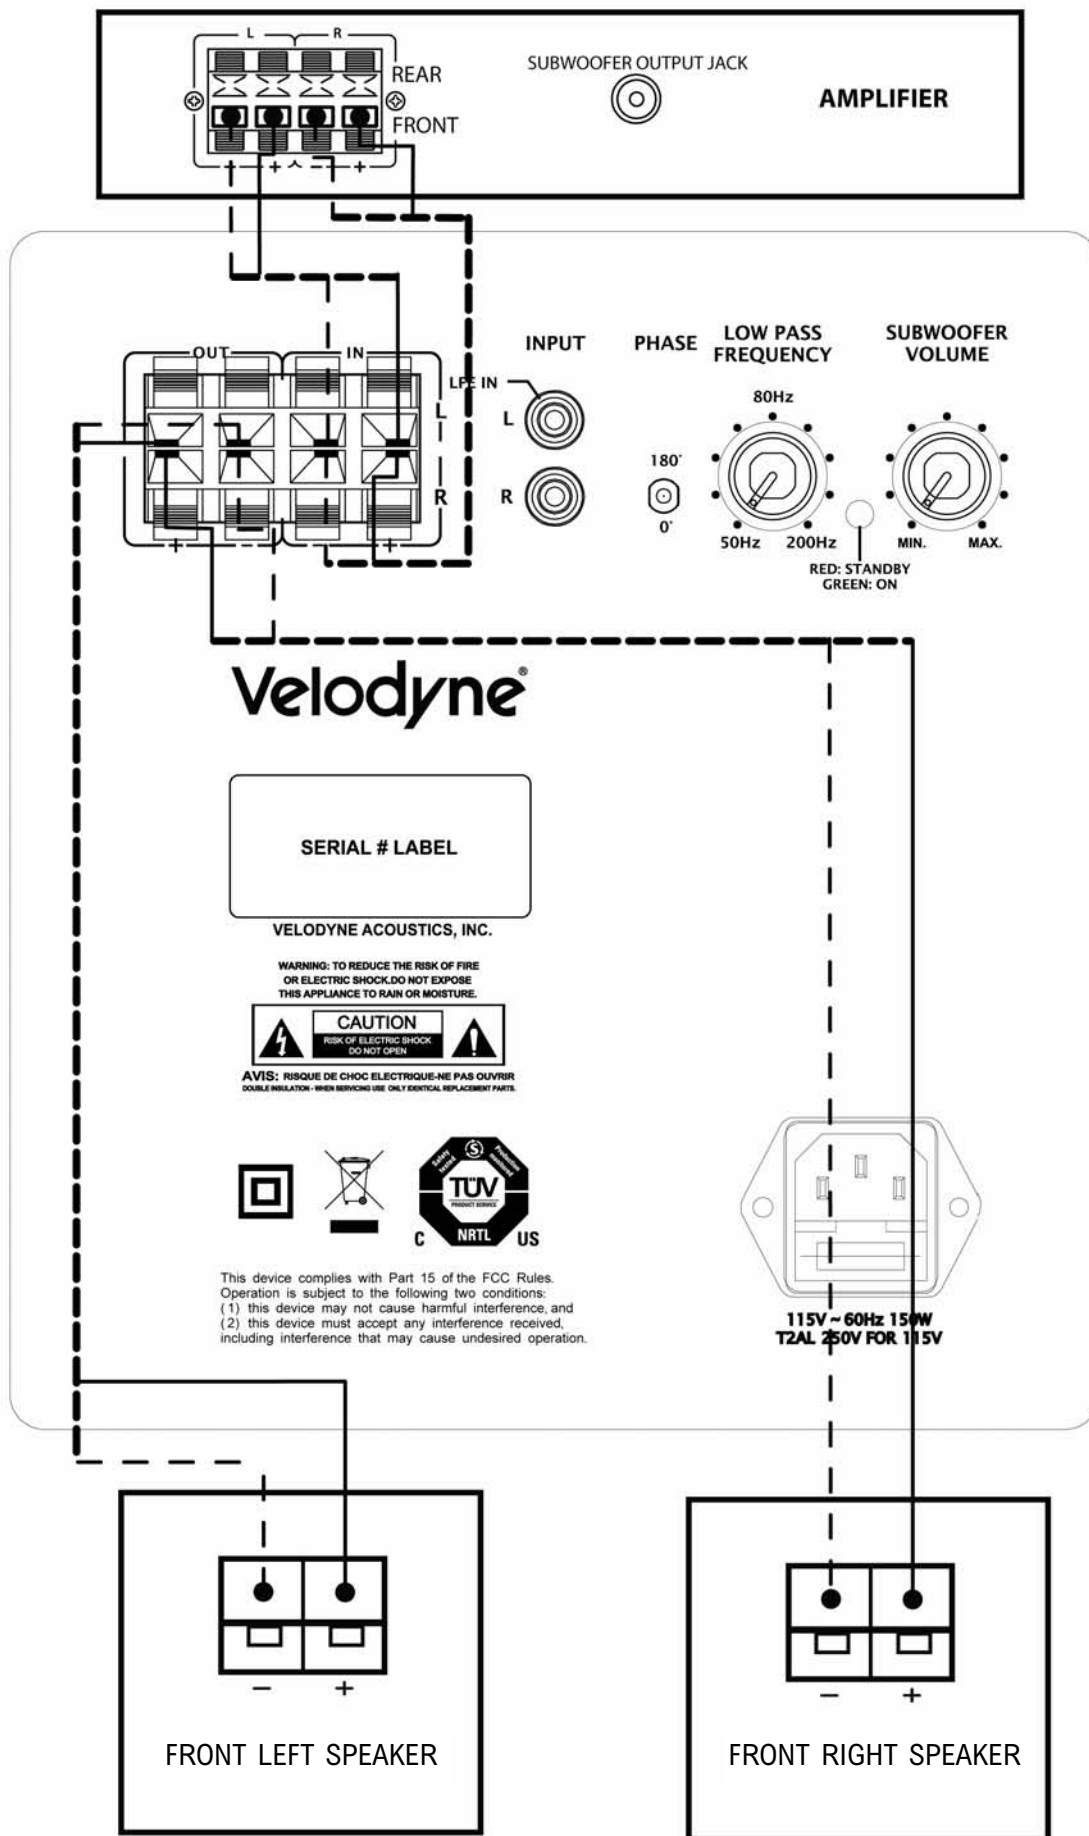 


Figure 2b. Speaker-level subwoofer connection diagram.

PROTECTION CIRCUITRY

Your new subwoofer is equipped with circuitry to provide maximum performance with greatest reliability.

The unit is protected against:

- 1) Overheating the amplifier.
- 2) Excessive drop in power line voltage.

If either of the above should happen, you should reduce the volume setting or shut the unit off until normal operating conditions return. You may also want to plug the unit into a different wall outlet, as dropping power line voltage will be most noticeable under strenuous conditions and may result in the unit shutting down intermittently.

TROUBLESHOOTING AND SERVICE

Before seeking service for your amplifier or subwoofer, please re-check all systems. Following is a simple troubleshooting guide to assist you.

1. Verify that the unit is plugged in and power outlet used is active.
2. Is the unit receiving an input signal from your receiver or processor?
3. Have all controls (volume, crossover, phase, etc.) been properly set?
4. If the unit has been running at high levels, one of the protection circuits may be engaged. Has the amplifier overheated?
5. Make sure speaker-level wires are firmly attached.

If the protection circuitry is active, the unit may cycle on and off until operating parameters return to normal. Under more serious conditions, the unit may shut off completely. Normal operation should return upon cooling, but you may be required to turn the power off and then on again to reset the unit.

The following conditions require service by a qualified technician:

1. The power cord has become damaged.
2. The unit does not appear to operate normally or exhibits a marked change in performance.
3. The unit has been exposed to water.
4. Some part of the chassis or circuitry is physically damaged.

Thank you for purchasing a Velodyne VX-11 Subwoofer!

SPECIFICATIONS

MODEL	VX -11
Woofer	10" forward firing (7.65" piston diameter)
Amplifier (Class D)	150 watts Dynamic, 100 watts RMS Power
Magnet Structure	2 lbs (0.9 Kg)
Frequency Response	33 Hz - 140 Hz (+/-3dB)
Voice Coil	1.6" copper wound
Cone	Coated fiber
Speaker-Level Pass-Through	Full range
Low Pass Crossover	50 Hz - 200 Hz
Phase	0° or 180°
Auto On/Off	Yes
Removable Grille	Yes
Video Shielding	No
LED Power Indicator	Yes
Cabinet Design	Bass-reflex with built-in power amplifier
Cabinet (H/W/D) (includes grille & controls)	15" x 12" x 17" (38 cm x 30 cm x 43 cm)
Shipping Weight (approx.)	35 lbs. (16 Kg)

Specifications are subject to change without notice.

115 - 120V

DD® Series

DD-10

DD-12

DD-15

DD-18

*Digital Drive 1812
Signature Edition*

DEQ-R Series

DEQ-8R

DEQ-10R

DEQ-12R

DEQ-15R

DLS™-R Series

DLS-3500R

DLS-3750R

DLS-4000R

DLS-5000R

Impact Series

Impact-Mini

Impact-10

Impact-12

MicroVee™

MiniVee®

MiniVee® 10

Optimum Series

Optimum-8

Optimum-10

Optimum-12

SMS™-1

SubContractor™ Series

SC-1250

SC-10

SC-12

SC-15

SC-IW

SC-IF/IC

SC-600 Amp

SC-602 Amp

SC-600 IW

SC-600 IF/IC

VX-11

220 - 240V

DD® Series

DD-10

DD-12

DD-15

DD-18

*Digital Drive 1812
Signature Edition*

CHT-Q Series

CHT-8Q

CHT-10Q

CHT-12Q

CHT-15Q

Impact Series

Impact-Mini

Impact-10

Impact-12

MicroVee™

SMS™-1

SPLi Series

SPL-800i

SPL-1000i

SPL-Ultra Series

SPL-800 Ultra

SPL-1000 Ultra

SPL-1200 Ultra

SubContractor™ Series

SC-1250

SC-10

SC-12

SC-15

SC-IW

SC-IF/IC

SC-600 Amp

SC-602 Amp

SC-600 IW

SC-600 IF/IC

FOR YOUR RECORDS. . .

Date Purchased _____

Dealer _____

Serial # _____

**NOTE: Please complete and return your warranty card within ten (10) days or*

Register. . . ON LINE . . . It's faster . . . and easier
www.velodyne.com

Velodyne Acoustics, Inc.

345 Digital Drive
Morgan Hill, CA 95037

408.465.2800 voice
408.779.9227 fax
408.779.9208 service fax

www.velodyne.com
Service E-mail: service@velodyne.com
Product E-mail: help@velodyne.com
Technical E-mail: techhelp@velodyne.com



63-VX11 Rev C JUN13